

nest.

Welcome Guide

Meet the Nest Learning Thermostat



Display

Turns blue when cooling and orange when heating.

Status

Nest shows you Time-to-Temperature and if it's heating, cooling or using Airwave.

Current temperature

Shows the temperature in your home.

Target temperature

Shows the temperature you want to reach.

Nest Leaf

Appears when you're saving energy.

Sensor Window

Contains temperature, humidity, light and activity sensors.

Explore Nest

Press the ring for the menu, then rotate to select.





If you have heating and cooling, easily switch between them manually or automatically.

Schedule

See the schedule Nest has learned from your temperature adjustments. If it's not right, change it.

Energy


See how much energy you've used in the last 10 days and why.


Settings

Choose options like thermostat lock and fan control.

Away

Set Nest to Away when you leave to save energy while you're gone.

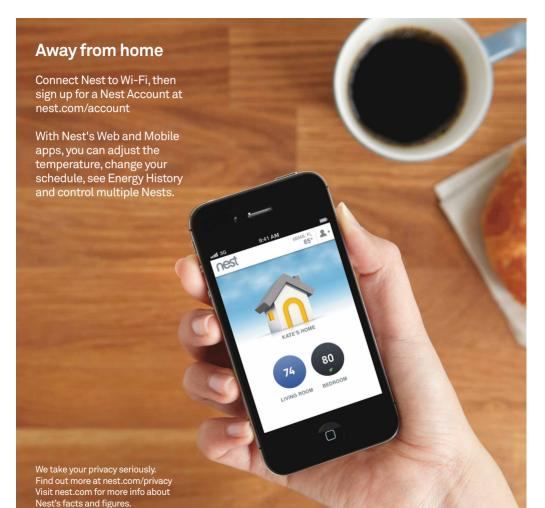

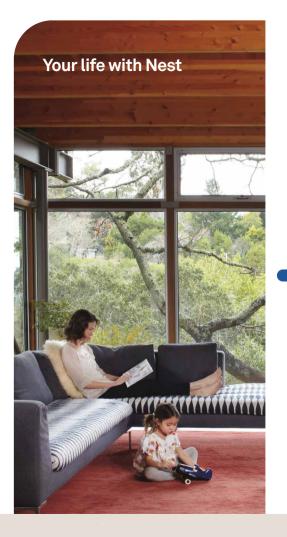



Auto-Schedule

Nest will remember the temperatures you like and build a schedule. Teach Nest by turning it down when you go to bed or leave the house.

System Match
Nest adapts to your system, whether it's forced air, heat pump or radiant.

Find even more detailed Energy History on the Web and Mobile apps.



%

Energy History

See when you used heating and cooling and how your temperature changes, the weather or Auto-Away affected your energy use.

Seasons change

When you switch from heat to cool or vice versa, Nest will learn a new schedule.

Day 1

Install & setup

nest.com/support

Remote control

Connect Nest to Wi-Fi, sign up for a Nest Account on nest.com, and download the Nest Mobile app for your smartphone or tablet.



Day 7

Check your schedule

You can edit your schedule on Nest or with the Web and Mobile apps.

Changing the temperature just one degree can lower your energy use up to 5%.

Nest Leaf

The Leaf appears when you choose a temperature that saves energy.

Auto-Away Nest automatically

turns itself to an energy-saving temperature when you're away.

Save the most with Auto-Away by setting your Away "heat to" temp below 65° and your Away "cool to" temp above 80°.

Day 30

Energy Report Your monthly Energy Report is packed with energy info and tips to help you save.

Day 90

Going on vacation?

Start saving money

the minute you walk

out the door by turning

Nest to Away manually.



Airwave

Airwave reduces AC runtime up to 30%. Airwave works in 80% of homes with AC.

Heat • Cool

If you need to switch between heating and cooling often, choose Heat • Cool to make the change automatically.